

# Solidcom H1 Wireless Intercom System Upgrade Manual


## Notes:

1. It is important to ensure that all devices (including: Central Station、Antenna、Belt-pack、Charging Case) are upgraded to the latest version, as inconsistent firmware versions may cause compatibility issues.
2. The upgrade process involves unknown risks. Please do not upgrade while the event is in progress.
3. Do not disconnect the power supply during the upgrade process. Please be patient as the upgrade may take some time.


## Central Station Upgrade

### Method 1: Upgrade via the web interface


1. Connect the Central Station to your computer via an Ethernet cable.
2. Access the computer web interface. For detailed connecting steps, please refer to this link: <https://www.hollyland.com/support/faq/solidcom-h1-wireless-intercom-system/usage-3>
3. Find the firmware update.

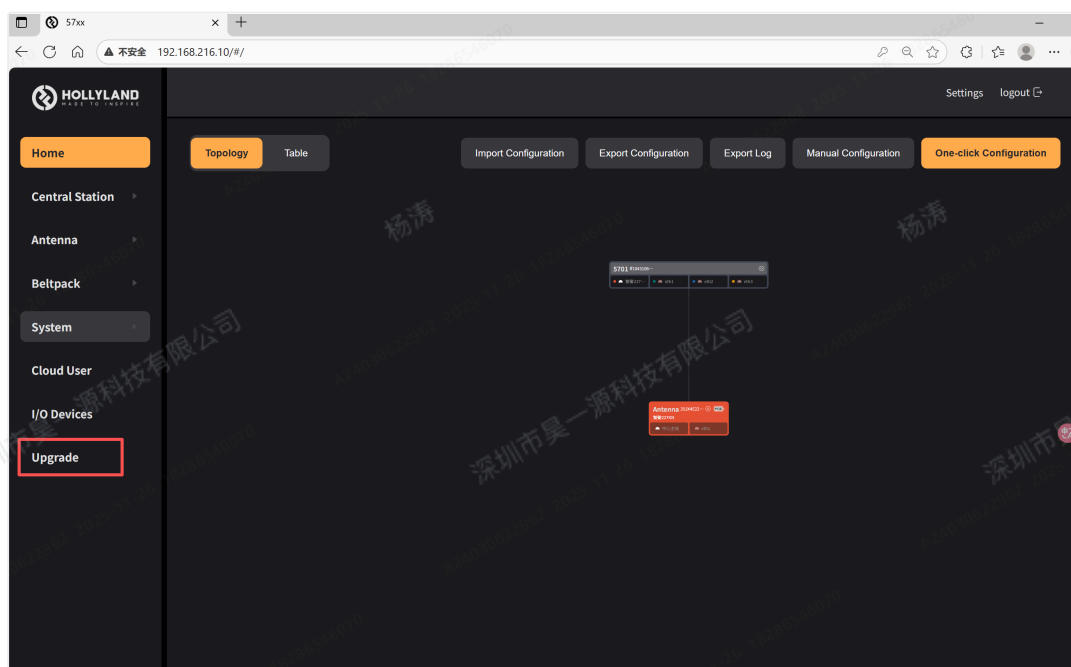

 
4. Choose Local Upgrade.

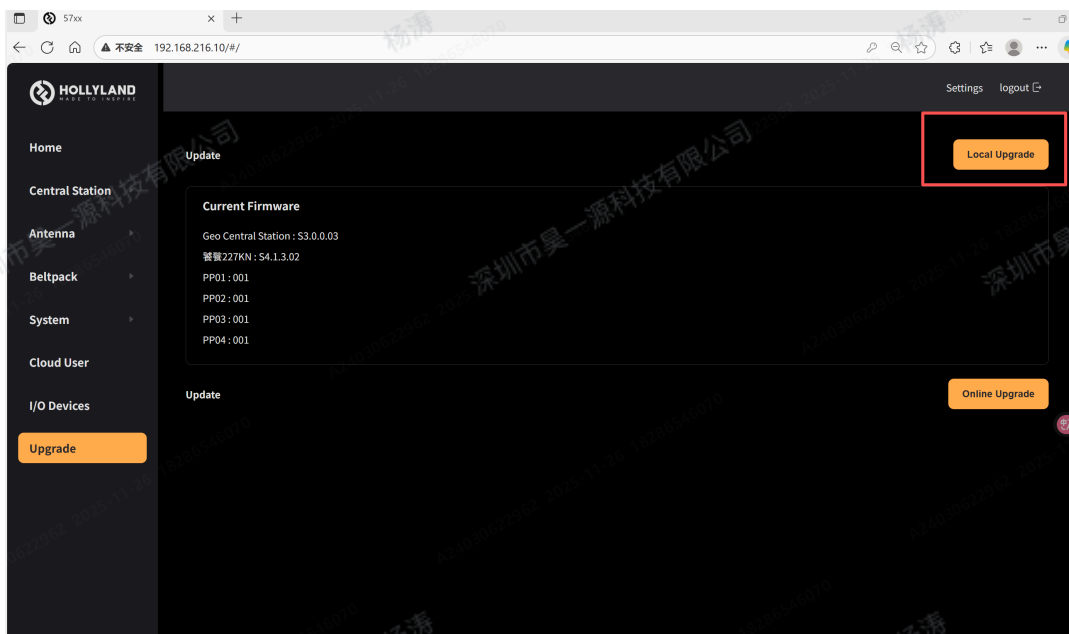

5. Import the downloaded firmware upgrade package (Note: Do not unzip the upgrade package).

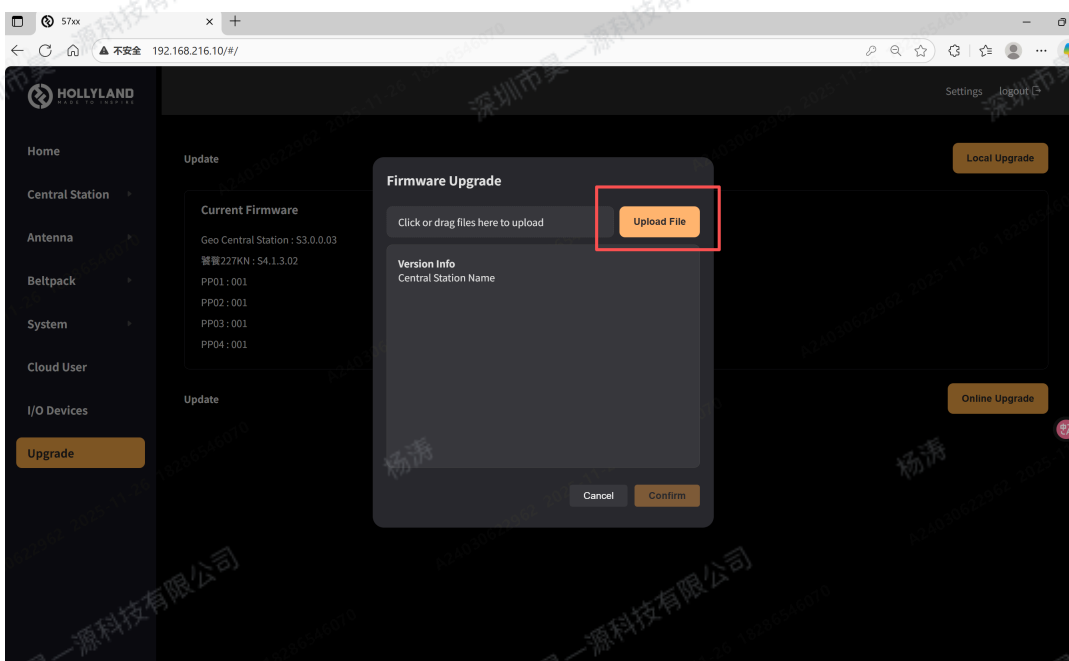


 6. After the upgrade package has been finished uploading, click "confirm" and wait for the device to complete the upgrade (Note: The upgrade process may take some time; please do not switch off the device or disconnect the power supply).

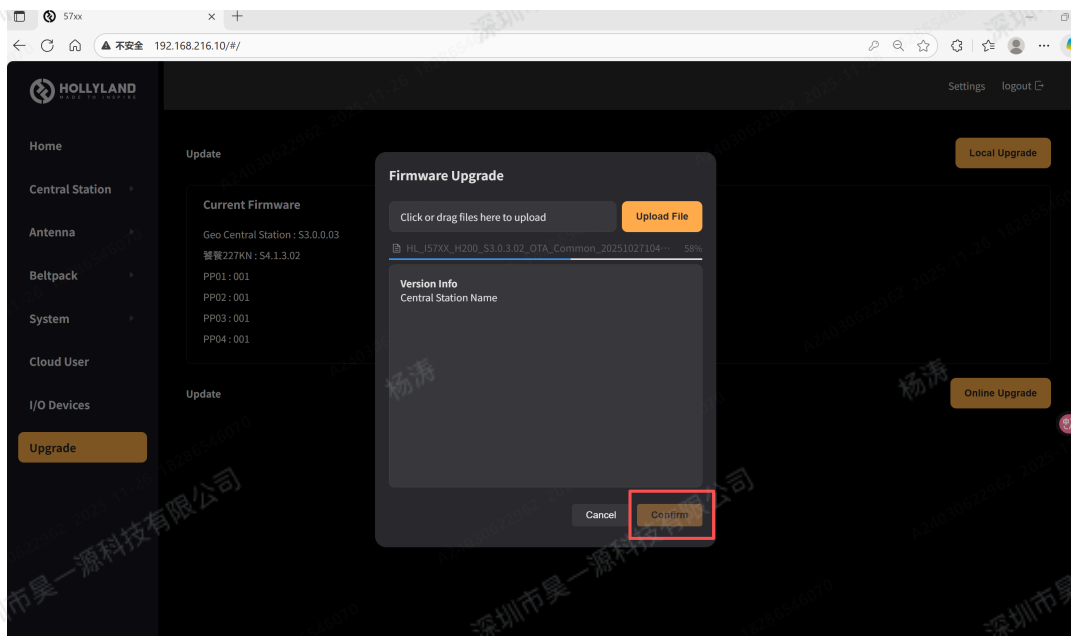

## Method 2: Upgrade via the USB driver

 1. Put the upgrade pack into USB driver. No need to unzip.

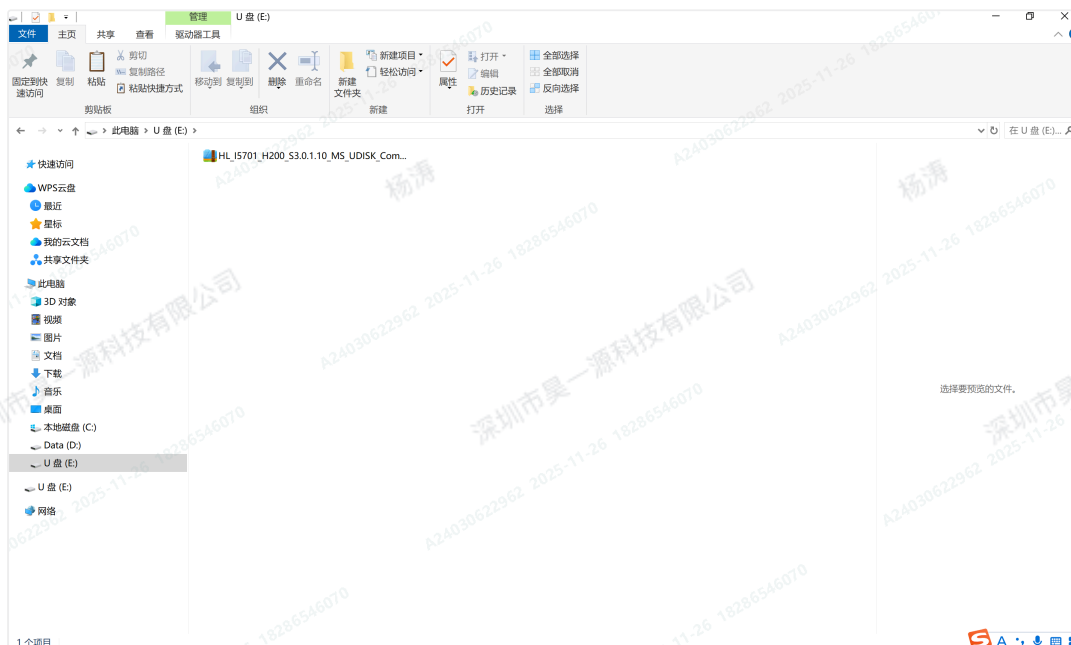

2. Insert the USB driver into the USB-A port of central station.



3. Wait for the Central Station to complete the update automatically (Note: The upgrade process may take some time; please do not switch off the device or disconnect the power supply).


## Antenna Upgrade

### Method 1: Upgrade via the web interface

The operating procedure is identical to that of Central Station; please refer to the steps above.

### Method 2: Upgrade via the USB driver

1. Put the upgrade pack into USB driver. No need to unzip.

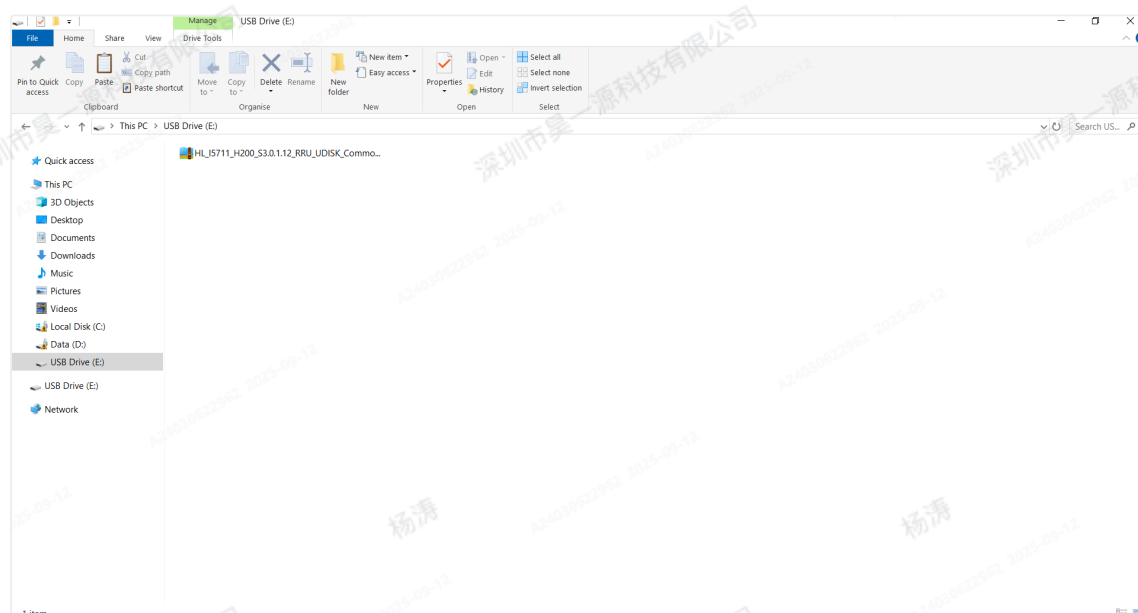

2. Insert the USB driver into the USB-A port of Antenna.




3. Wait for the Antenna to complete the update automatically (Note: The upgrade process may take some time; please do not switch off the device or disconnect the power supply).

## Charging Case Upgrade
 
### Method 1: Upgrade via the USB driver

1. Put the upgrade pack into USB driver. No need to unzip.

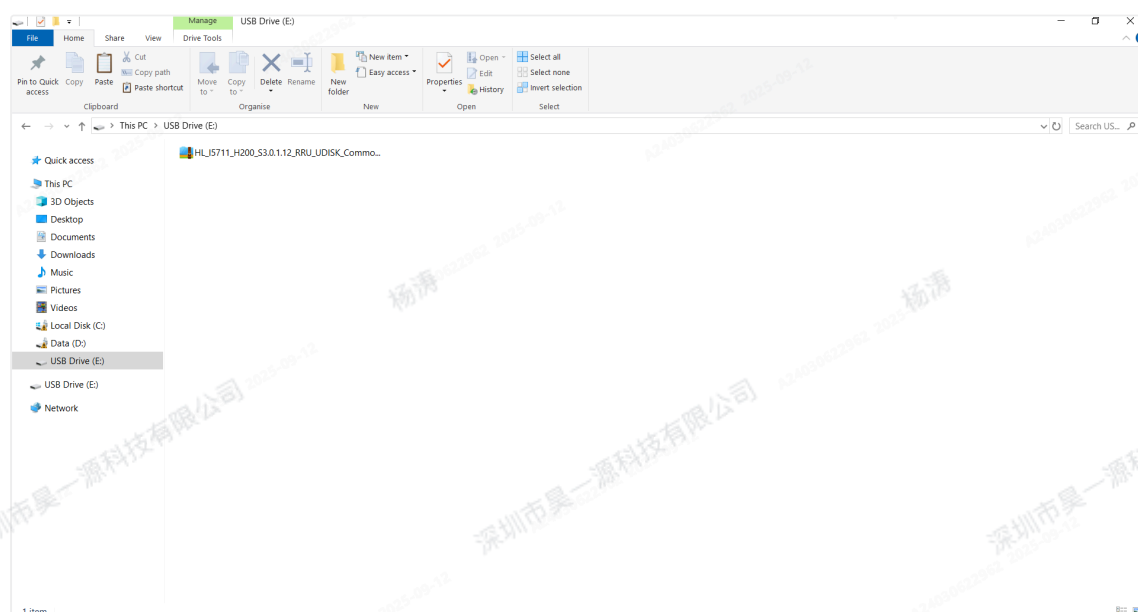




2. Insert the USB driver into the USB-A port of Charging Case.



 
3. The indicator light will flash when the upgrade starts. The upgrade process may take a while, so you may need to wait a few minutes.

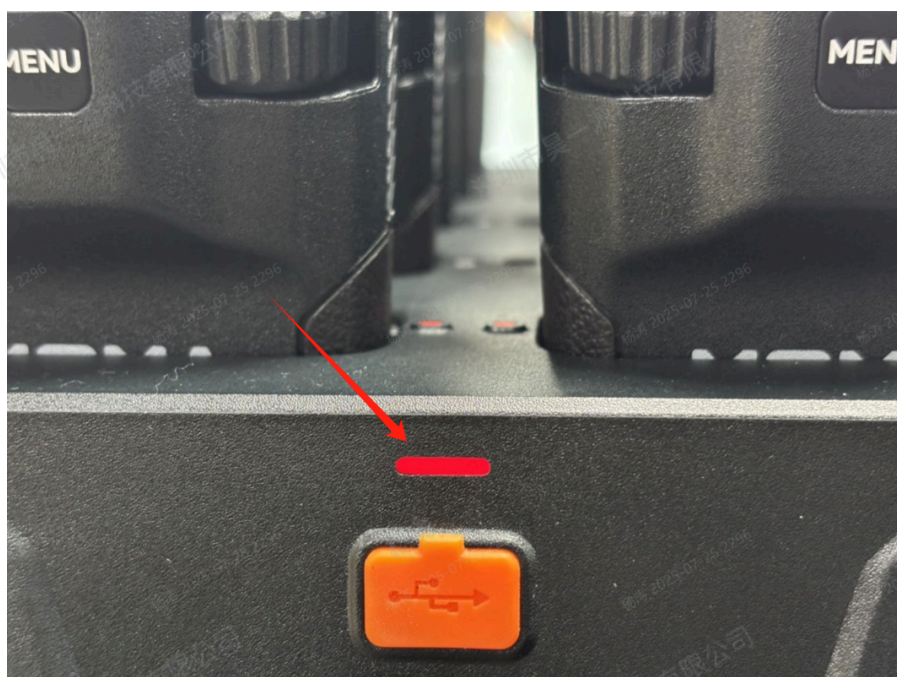

4. Wait for the Charging Case to complete upgrade automatically. Once the upgrade is complete, the indicator light will stop flashing.

## Method 2: Upgrade via connect to Antenna or Central Station

 1. Connect the Charging Case's LAN port to the Antenna or Central Station's LAN port using an Ethernet cable. When successfully connected, the charging case's indicator light changes from red to blue.

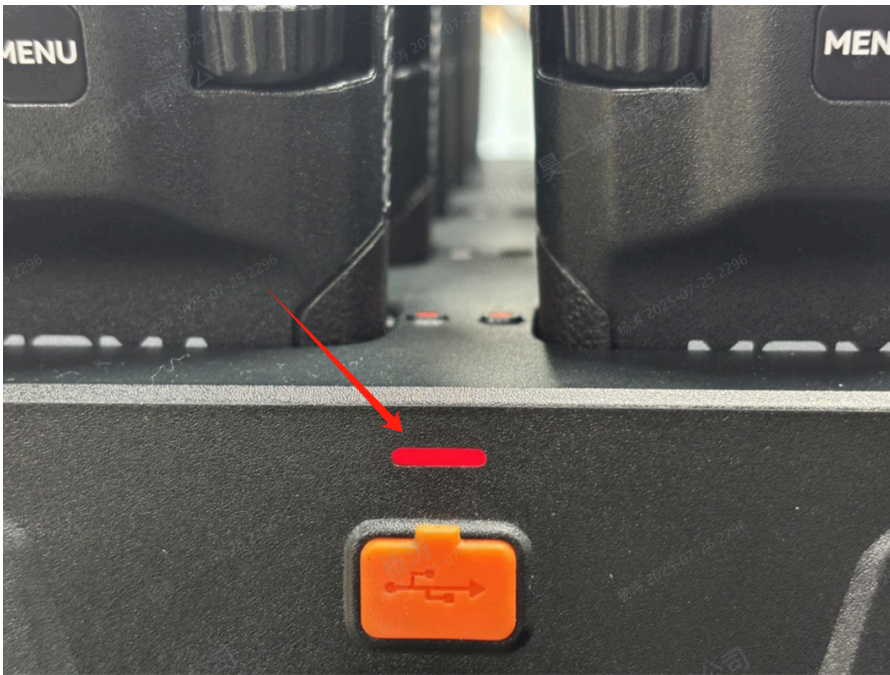

2. Click “Upgrade” when prompted by the Central Station or Antenna, then wait for the upgrade to complete.

## Beltpack Upgrade

### Method 1: Upgrade in the Charging Case

1. Place the Beltpack into the Charging Case that has completed the upgrade.



2. Wait for the Beltpack to complete upgrade automatically.

### Method 2: Connect Antenna or Central Station upgrade

1. Connect the Beltpack USB-C port and Antenna or Central Station USB-A port using a data cable.





2. Click OK to upgrade.



3. Wait for the Beltpack to complete upgrade automatically.