LARK MAX 2 Upgrade Tutorial

Note

• Upgrading is risky. Please do not upgrade the device during important activities. If you meet problems during the upgrade, please contact our after-sales technical for support

• Ensure that the battery is enough charged during the upgrade process to avoid upgrade failure;

• Before upgrading, please make sure that the microphones are connected to the receiver;

• Please ensure that the phone is not disconnected or the APP is exited during the upgrade process, otherwise the upgrade will fail;

Wireless monitor headphone upgrade

Steps as below:

1. Place the headphone in box and open the lid.

2. Triple press the button in the back of box, switch the indicator to flash blue,into bluetooth mode.(Device:OWS Monitor Earphone)



3. Open the [LARK SOUND] APP to upgrade the firmware, make sure the current APP version is the latest, Firmware check: APP main interface -- Settings -- About the APP



After check, Click Connect Headphones -- Check for Updates -- Download and Install, the indicator light of the headphone will show purple during the upgrade, wait for the upgrade to succeed.



Micophone upgrade via box

Setting:

- LARKSOUND APP, Version up to date
- Andriod/iPhone mobile

Note: Upgrade via box will update the Transmitter, Receiver, Charging box, but except Phone Receiver. You need to upgrade the Phone Receiver separately

Steps as below:

TR-T

- 1. Place all devices into box, long press the knob button to turn on the bluetooth mode.
- 2. Turn on mobile bluetooth and into the APP to pair the box.







During the upgrade process, the BOX indicator light will show a purple breathing state. After the transmission is completed, the BOX will automatically enter the upgrade and wait 深圳市是一源科技有限公司 for the upgrade to succeed.

- 4. After the upgrade is successful, the device automatically restarts
- 5. Do not take out the device during the upgrade process.

Phone Receiver Upgrade

- 1. Plug the receiver to mobile phone.
- 2. Enter APP to update the camera receiver and Mic firmware

C LARK MAX 2 Settings C Version Information Mic 1 IN	
Mic 1 St 199% Service Information Mic 1 SN:	
	-
Mic 2 100%	-
BIX 99% BReset	: TENR!
Disconnect BOX SN:	9- 1 -
Mic 1 Firmware Version: V3.0.0.6	2
Phone Speaker Lock Mic V3.0.0.6	2
RX Firmware Version: V3.0.0.6	2
NC Level BOX Firmware Version: V3.0.0.3	7
Dynamic Gain	
High Medium Low	
Set gain to	
Mic1 -5 dB	
Mic2 -3 an	
- Check for update	
	الم

Camera receiver upgrade

- 1. Connect the receiver to mobile via USB-C to USB-C or USB-C to Lightning cable.
- 2. Enter APP to update the camera receiver and Mic firmware. Before upgrading, please make sure that the microphones are connected to the receiver;

	17:24	*** 🕫 🕰	17:24	*** 🕆 72	17:24	···! († (72)	17:25	:::: † 72)
	< Search Device	େ ଡ	< LA	RK MAX 2	< Settings		< Version Informa	ition
0	Available devices		Mik 1 💽 100%	S Version Information		Mie 1 SN:		
	Connect			Mic 2 💽 100%	😰 User Manual	1. TO 18	Mic 2 SN:	
				BOX 📑 99%	Reset	\ ,	RX SN:	
	LARK MAX 2						BOX SN:	
							Mic 1 Firmware Version:	V3.0.0.62
			Phone Speaker	Lock Mic			Mic 2 Firmware Version:	V3.0.0.62
							RX Firmware Version:	V3.0.0.62
			NC Level				BOX Firmware Version:	V3.0.0.37
			Dynamic Gain					
			High	Medium Low C				
			Set gain to	1977				
			Mic1	-5 dB				
			4 -					
			Mic2	-3 di				
			4-					heck for updates
								_
			9 10	300			380	

3. After the upgrade is successful, the device automatically restarts



Note: If update fail. it will restart, plz try again after restart.